



Model 42 Quick Start Guide

1.

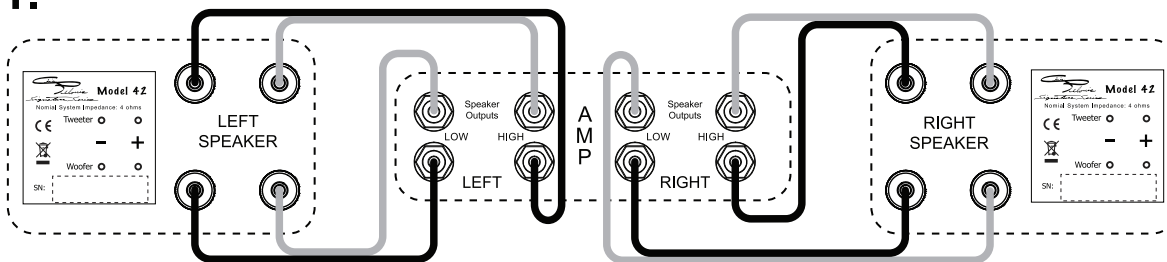

Connect both the right and left speakers to the amplifier as shown. Failure to do this correctly will result in audio degradation. High output to tweeter - low output to woofer - red to red - black to black.


2.

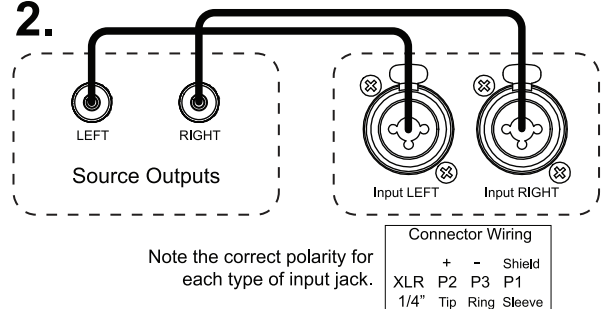

Note the correct polarity for each type of input jack.


Connect the source outputs to the amplifier inputs as shown using either XLR or 1/4" jacks.

3.

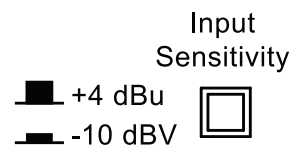


Set the input sensitivity switch in or out depending on the output sensitivity of the source device. The general guideline for this is that consumer sources (PCs, MP3 players, etc) will use the -10 dBV setting (IN) while professional sources (mixing consoles, etc) will use the +4 dBV setting (OUT).


4.

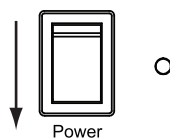

Make sure the amplifier is switched off - front panel power switch rocker is in the down position.

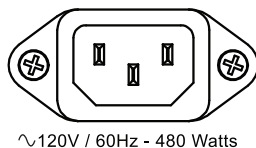

Plug the supplied AC cord into the AC jack on the back of the amplifier. Then plug the cord into an AC outlet.

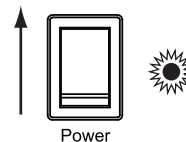

Turn the amplifier on - power switch in the up position. Once the blue LED turns on the system is ready to play.

5.



Note: The front panel USB port PC interface is to be used only with Pelonis Signature Software. Using the port in any other manner can damage the system and void the warranty.

To download and install the software visit:

www.chrispelonisspeakers.com